


How To Read Your Water Meter

Flow Indicator
Currently 12.3
Gal. Per Min

Special Symbols
Forward Flow Leak

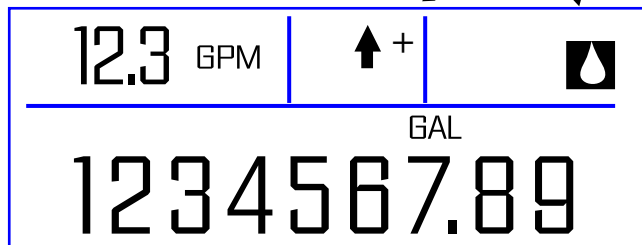

This is your reading down to 100th of a gallon. The actual read on this meter is 1,234,567 gallons OR 1,234,567.89 to be exact. We only read the whole numbers and bill for every 100 gallons.

The Leak Symbol means your meter has seen continuous flow for the last 23 hours without interruption. This indicator will turn off once 0 gallons are used for a 1 hour period. If you suspect a leak, turn off every access to water and check the Flow Indicator. It should read 0.0 GPM

